 




Artista Rsx Printer Repackaging for Shipment

 
Use the following procedures to prepare the Entrust Artista RSx Instant Financial Issuance System.

1. Press the power button to power off the printer.

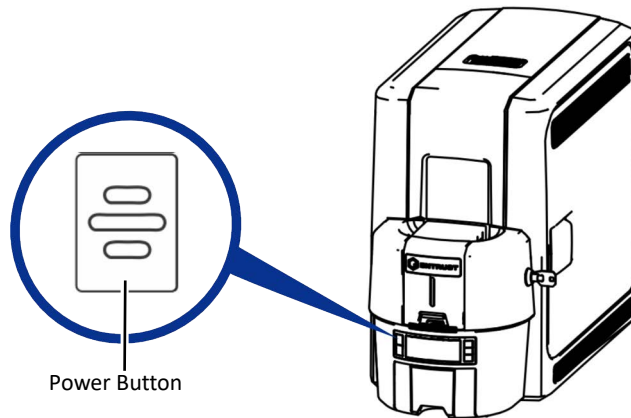


Caution: Wait until all the lights on the front panel are off to make sure that the printer power is off.


2. Disconnect the network or USB cable (the cable is not required for shipment).
3. Unplug the power cord from the printer (the cord is not required for shipment).

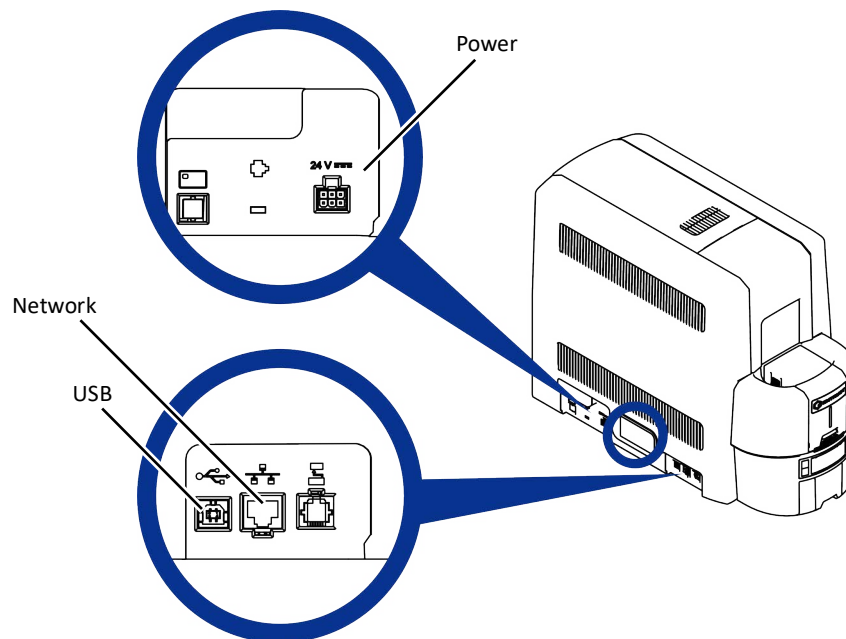

 4. Remove the multi-hopper from the printer.
 - a. Unlock and open the printer.
 - b. Remove the C1 supply cartridge.
 - c. Push in on the multi-hopper retaining tab located at the inside front of the printer frame.

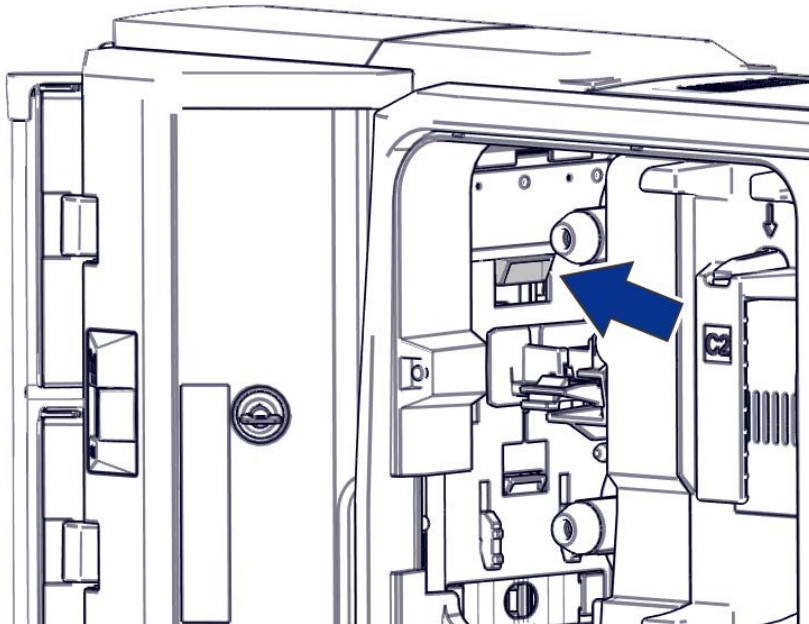

 
- d. Lift up slightly on the multi-hopper component to release the mounting hooks from the printer frame.
- e. Pull out to remove the multi-hopper.

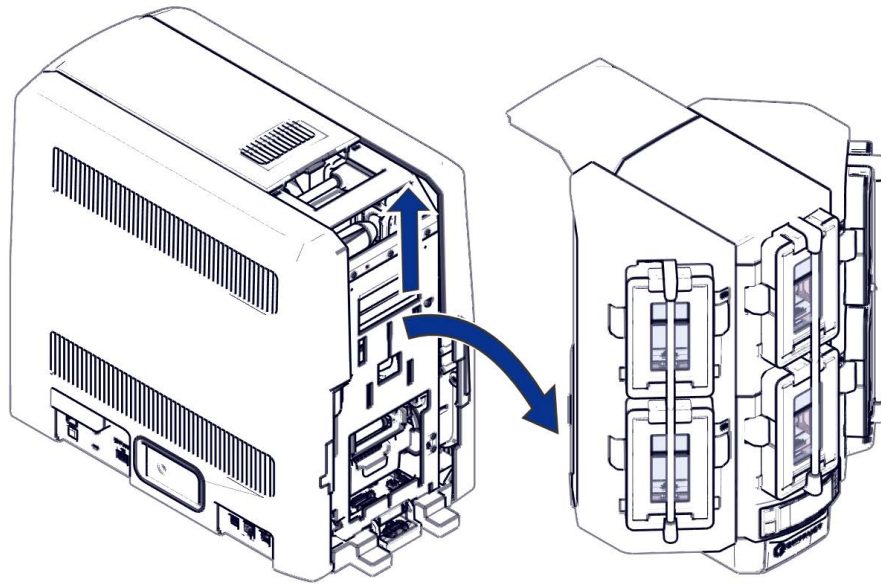

- 5. Disconnect the interconnect cable from ES1 Emboss Module.



 The interconnect cable disconnect procedure is required only on a RS4 Instant Financial Issuance System with an ES1 Emboss Module.

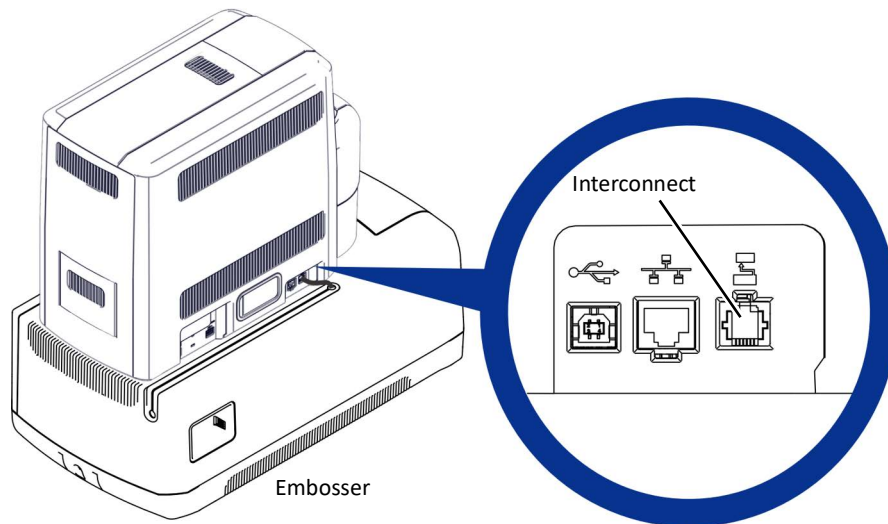


6. Remove the printer from the ES1 Emboss Module.




- Removing the printer from the ES1 Emboss Module is required only on a RS4 Instant Financial Issuance System with an embosser.

 
- a. Unlock the embosser, open the access door, and push the locking lever inside the embosser to the left to unlock the printer.
- b. Lift the printer up and off of the embosser.

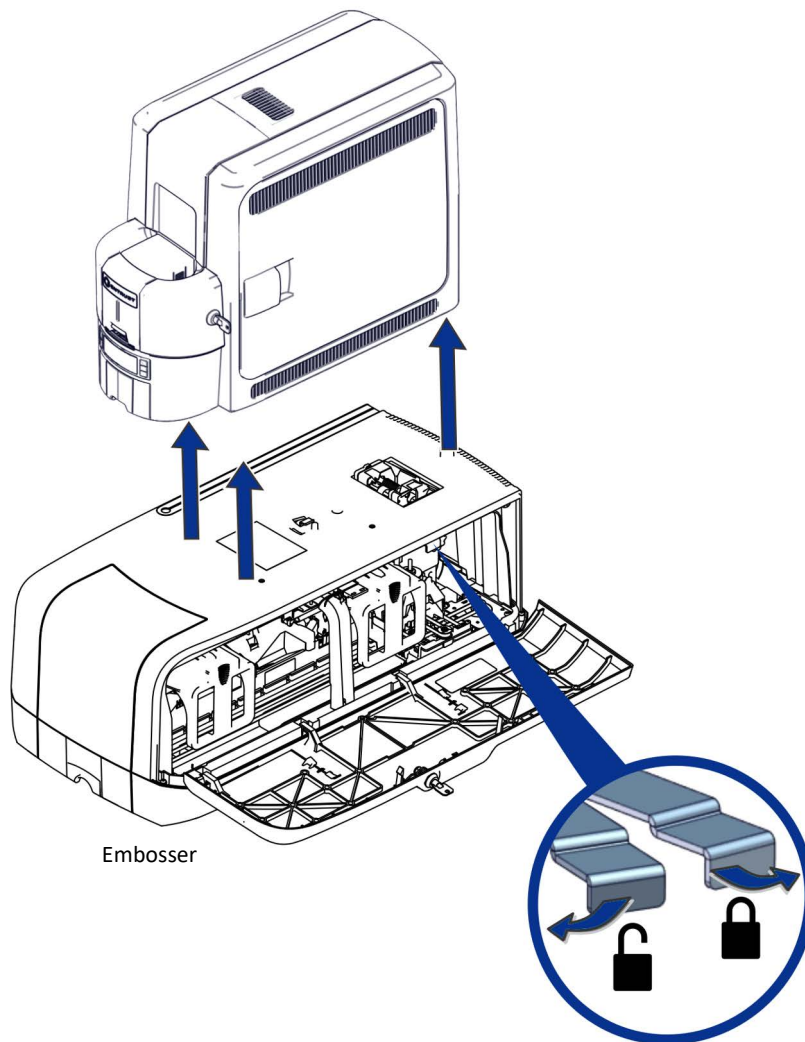

 
7. Remove the printer supplies.
 - a. Unlock (if required) and open the printer access door.
 - b. Remove the ink ribbon cartridge (C1) and the retransfer film cartridge (C2) from the printer.

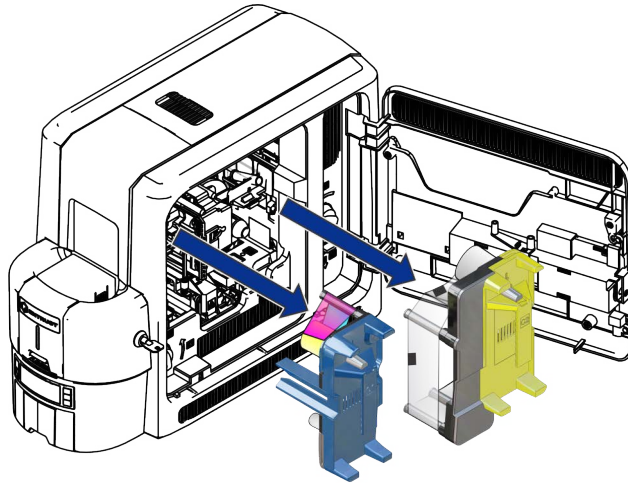

 
- c. Remove the cleaning spindle (C3).

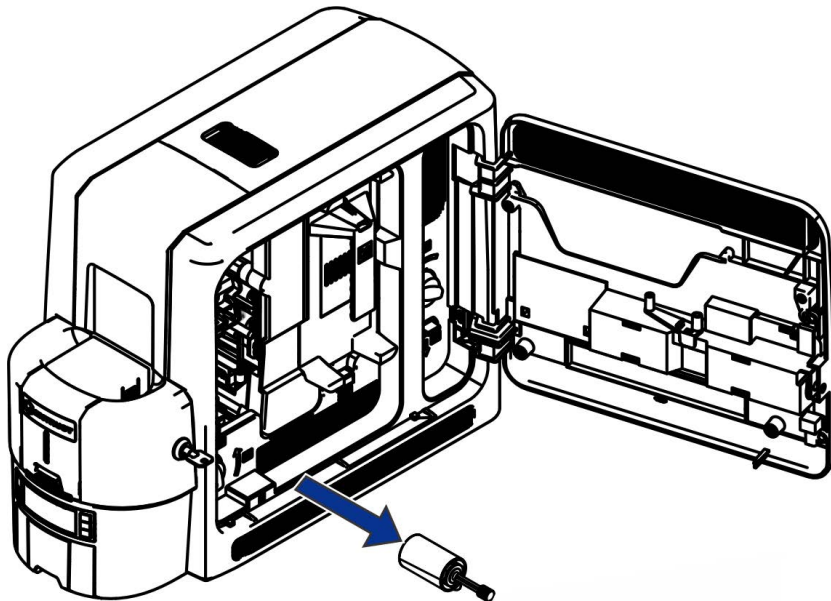

 - d. Remove the ink ribbon from the ribbon cartridge (C1).

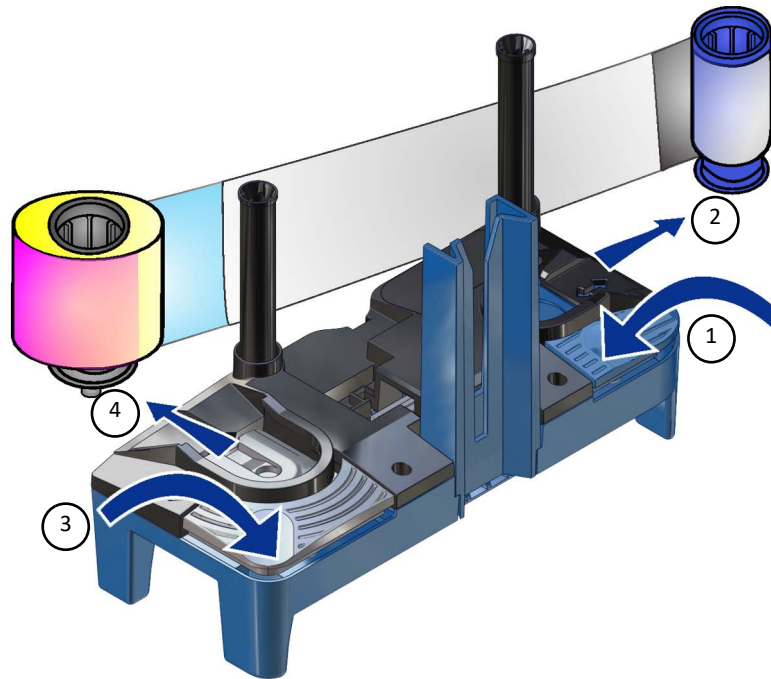


 - e. Remove the retransfer film from the film cartridge (C2).

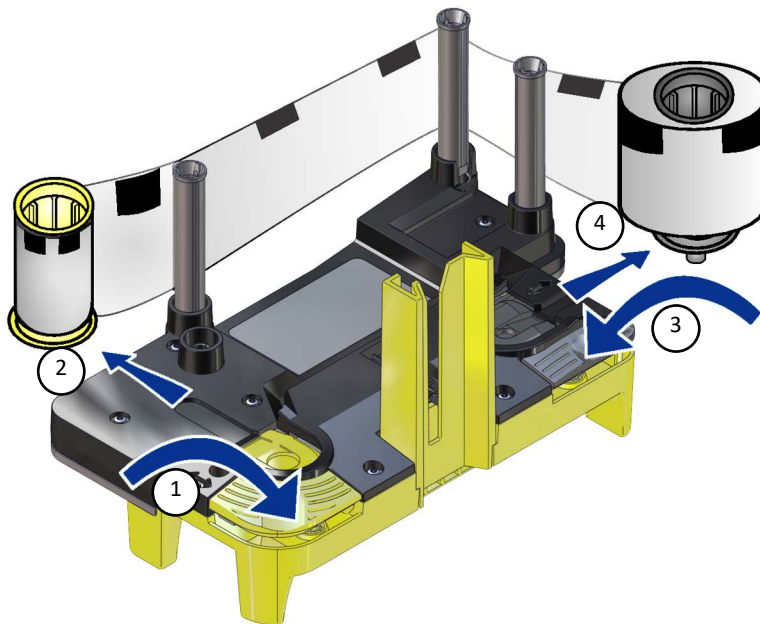


- f. Replace the empty ink ribbon (C1) and retransfer film (C2) cartridges in the printer.
- g. Close and lock (if required) the printer access door.

 8. Pack the printer.
 - a. Place the foam base on the bottom of the printer.
 - b. Place the foam base and printer inside the box.
 - c. Place the foam cap on top of the printer inside the box.
 - d. Set the cardboard supplies tray on top of foam cap inside the box.
 - e. Tape the cleaning spindle to the cardboard supplies tray.

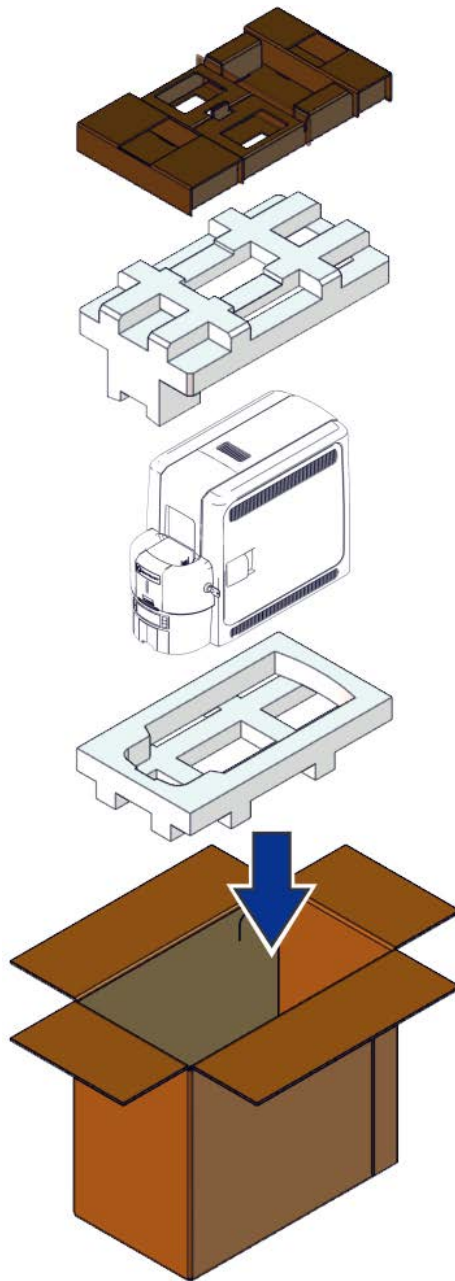

 9. Secure the box for shipping.
 - a. Fold the box shut.
 - b. Wrap shipping tape around the box to secure the container for shipping.

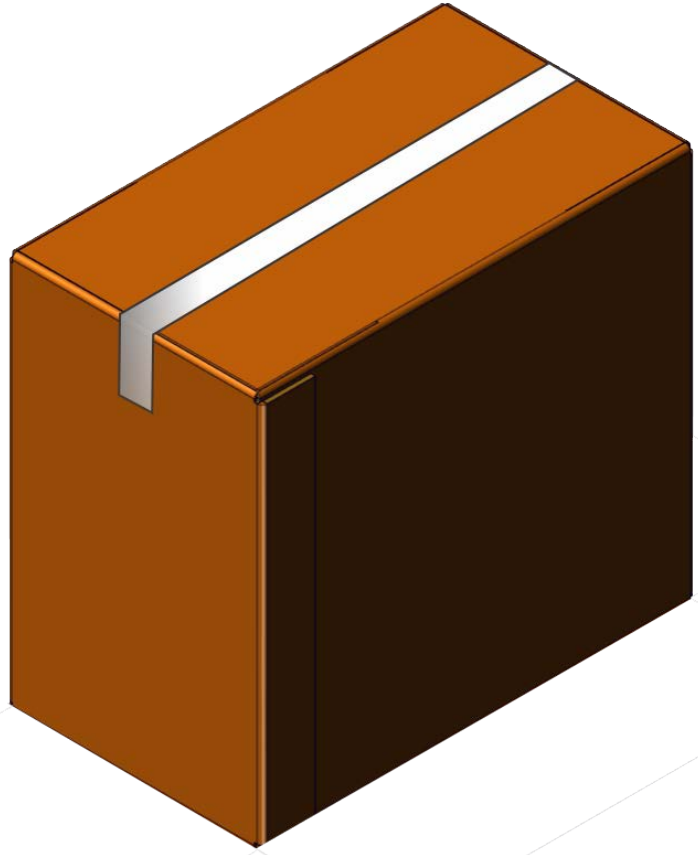

Entrust, Sigma and the hexagon design are trademarks, registered trademarks and/or service marks of the Entrust Corporation in the United States and other countries.

All other product names are the property of their respective owners.

© 2024 Entrust Corporation. All rights reserved.