



Hitachi VSP G & E Series

KeyControl® Integration Guide

2024-02-12

Table of Contents

1. Introduction	1
1.1. Product configurations	1
1.2. Requirements	1
2. Procedures	2
2.1. Deploy a KeyControl cluster	2
2.2. Specify an LDAP/AD authentication server	3
2.3. Enable KMIP	4
2.4. Create tenant	4
2.5. Add x509v3 extensions to the OpenSSL configuration file	5
2.6. Create CSR	6
2.7. Create tenant client certificate bundle	7
2.8. Convert tenant client certificate to PKCS #12 format	9
2.9. Import tenant client certificate into the VSP	10
2.10. Configuration to support the Hitachi VSP	10
2.11. Execute tests	11
3. Integrating with an HSM	12
4. Additional resources and related products	13
4.1. KeyControl	13
4.2. Entrust digital security solutions	13
4.3. nShield product documentation	13

Chapter 1. Introduction

This document describes the integration of the Hitachi Virtual Storage Platform (referred to as VSP in this guide) with the Entrust KeyControl 5.5.1 (formerly HyTrust KeyControl) key management solution. Entrust KeyControl (referred to as KeyControl in this guide) serves as a key manager for storage encryption by using the open standard Key Management Interoperability Protocol (KMIP).

1.1. Product configurations

Entrust has successfully tested the integration of KeyControl with VSP in the following configurations:

System	Version
Entrust KeyControl	5.5.1

1.2. Requirements

Before starting the integration process, familiarize yourself with:

- The documentation and set-up process for the Hitachi VSP G & E Series family of products in the [Hitachi Vantara online documentation](#).
- The documentation and set-up process for Entrust KeyControl, see [Entrust KeyControl Product Documentation](#).
- Also see [Entrust DataControl and KeyControl v5.5.1 Online Documentation Set](#).



Entrust recommends that you allow only unprivileged connections unless you are performing administrative tasks.

Chapter 2. Procedures

Follow these steps to install and configure KeyControl with VSP.

- [Deploy a KeyControl cluster](#)
- [Specify an LDAP/AD authentication server](#)
- [Enable KMIP](#)
- [Create tenant](#)
- [Create tenant client certificate bundle](#)
- [Add x509v3 extensions to the OpenSSL configuration file](#)
- [Create CSR](#)
- [Create tenant client certificate bundle](#)
- [Convert tenant client certificate to PKCS #12 format](#)
- [Import tenant client certificate into the VSP](#)
- [Configuration to support the Hitachi VSP](#)
- [Execute tests](#)

2.1. Deploy a KeyControl cluster

This deployment consists of two nodes.

1. Download the KeyControl software from <https://my.hytrust.com/s/software-downloads>. This software is available both as an OVA or ISO image. The OVA installation method in VMware is used in this guide for simplicity.
2. Install KeyControl as described in [KeyControl OVA Installation](#).
3. Configure the first KeyControl node as described in [Configuring the First KeyControl Node \(OVA Install\)](#).
4. Add second KeyControl node to cluster as described in [Adding a New KeyControl Node to an Existing Cluster \(OVA Install\)](#).



Both nodes need access to an NTP server, otherwise the above operation will fail. Log in the console to change the default NTP server if required.

5. Install the keyControl license as described in [Managing the KeyControl License](#).

2.2. Specify an LDAP/AD authentication server

1. Log into the KeyControl webGUI using an account with Security Admin privileges.
2. Select **Settings** in the top menu bar.
3. Select **Authentication** in the **General Settings** pane.
4. Select **LDAP** in the **Type** drop-down box.
5. Enter your account info on the **Domain** tab and then select **Apply**.

General Settings ×

KeyControl Account Admin Key Parts Audit Log **Authentication** Mail Server Session Timeout SSL Configuration

Type:
LDAP

Domain Domain Controllers

Domain Name:

Service Account Name:

Service Account Password:

UID Attribute:

6. Select **Add Domain Controller** in the **Domain Controllers** tab.
7. Select **LDAP** in the **Server URL** drop-down box.
8. Enter a **Server URL**, **User Search Context**, and **Group Search Context**. Then select **Save and Close**.

The user and group search context can be found by running the following command lines on a terminal in the required domain:

```
dsquery user -name <known username> dsquery group -name <known group name>
```

For example:

```
C:\Windows\system32>dsquery user -name "Hitachi VSP"  
"CN=Hitachi VSP,CN=Users,DC=interop,DC=com"
```

Edit Domain Controller interop.com
✕

Server URL: ?

LDAP://
interop.com

STARTTLS: ?

CA Certificate: ?

Load File
Clear

Certificate needs to be in base64 encoded pem format. Required if STARTTLS or LDAPS is selected.

[Hide Advanced settings](#)

User Search Context (Base DN): ?

DC=interop,DC=com

Group Search Context (Base DN): ?

DC=interop,DC=com

Timeout: ?

5
⌵

Minimum value of 1 second, max 15.

Cancel
Save & Close

Notice the added domain controller.

General Settings
✕

KeyControl Account
Admin Key Parts
Audit Log
Authentication
Mail Server
Session Timeout
SSL Configuration

Type:

LDAP
⌵

Domain Domain Controllers

! Important: The order in which the entries appear determines the order of precedence if there is a connection timeout.

+
✎
✖

	Server URL	User Base DN	Group Base DN	Timeout
<input type="checkbox"/>	ldap://interop.com	DC=interop,DC=com	DC=interop,DC=com	5 seconds ↑ ↓


See the following link for additional information [Specifying an LDAP/AD Authentication Server](#).

2.3. Enable KMIP

1. Select **KMIP** in the menu bar in the KeyControl webGUI.
2. Select the **Settings** tab.
3. For **State**, select **Enable**. Then select **Apply**.
4. In the **Overwrite all existing KMIP Server settings?** dialog, select **Proceed**.

2.4. Create tenant

1. Select **KMIP** in the menu bar in the KeyControl webGUI.
2. Select the **Tenants** tab.
3. Select **Actions > Create a KMIP Tenant**.
4. Enter the name and description. Then select **Next**.

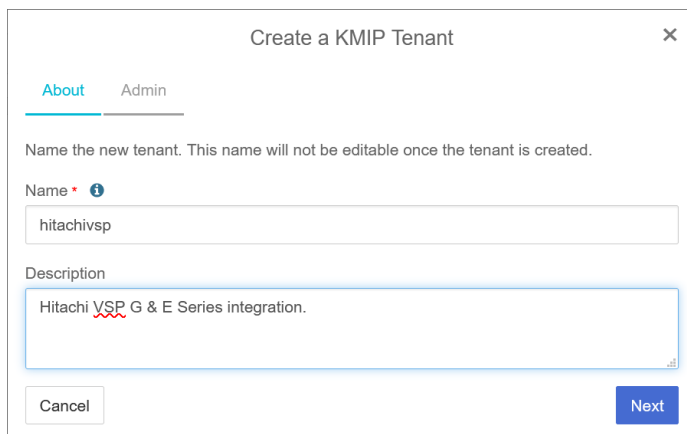

Create a KMIP Tenant

About Admin

Name the new tenant. This name will not be editable once the tenant is created.

Name * ?


hitachivsp

Description

Hitachi VSP G & E Series integration.

Cancel Next

5. On the **Admin** tab, select the Active Directory.
6. Enter the required user in the search box.
7. Enter email address and select **Create**.

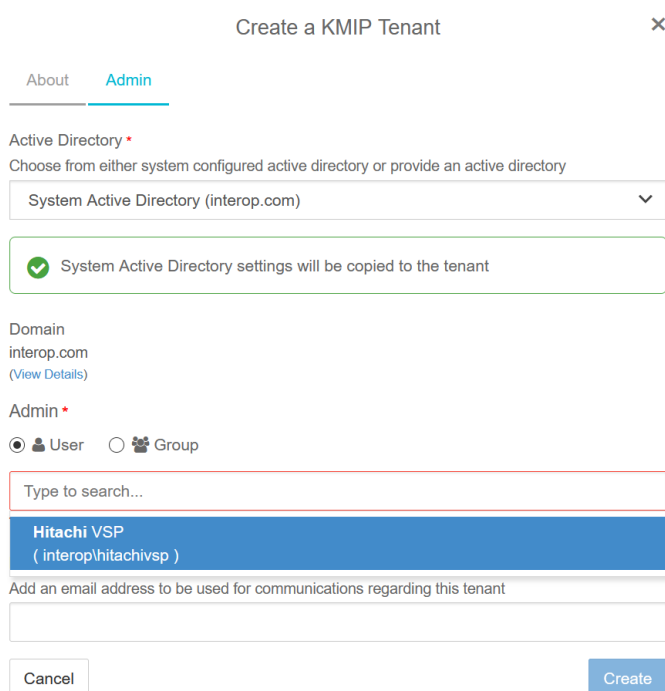

Create a KMIP Tenant

About Admin

Active Directory *

Choose from either system configured active directory or provide an active directory

System Active Directory (interop.com)

System Active Directory settings will be copied to the tenant

Domain

interop.com
(View Details)

Admin *

User Group

Type to search...

Hitachi VSP
(interop\hitachivsp)

Add an email address to be used for communications regarding this tenant

Cancel Create

See the following link for additional information [Creating a KMIP Tenant](#).

2.5. Add x509v3 extensions to the OpenSSL configuration file

The VSP requires the x509v3 extensions in the client certificate. KeyControl will generate the client certificate based on the client certificate request (CSR). As a result the CSR must contain the x509v3 extensions.

OpenSSL was used in this integration to generate the CSR. The following steps configure OpenSSL to generate a CSR with the x509v3 extensions.

1. Display the version of OpenSSL:

```
# /usr/local/bin/openssl version
OpenSSL 3.0.3 3 May 2022 (Library: OpenSSL 3.0.3 3 May 2022)
```

2. Edit `/usr/local/ssl/openssl.cnf`.
3. Add the following lines to the **[req]** section:
 - `req_extensions = v3_req`
 - `x509_extensions = usr_cert`
4. Un-comment the following lines in the **[usr_cert]** section:
 - `keyUsage = nonRepudiation, digitalSignature, keyEncipherment`
 - `extendedKeyUsage = critical,timeStamping`
5. Add the following line to the **[v3_req]** section:
 - `keyUsage = nonRepudiation, digitalSignature, keyEncipherment`
 - `extendedKeyUsage = serverAuth, clientAuth, codeSigning, emailProtection`

2.6. Create CSR

1. Create a key:

```
# /usr/local/bin/openssl genrsa -out svp.key 2048
```

2. Create a CSR from the key above:

```
# /usr/local/bin/openssl req -new -config /usr/local/ssl/openssl.cnf -key svp.key -out svp.csr
```


3. Notice the CSR contains the x509v3 extensions:

```
# openssl req -text -noout -verify -in svp.csr
verify OK
Certificate Request:
  Data:
    Version: 1 (0x0)
    ...
```

```
Requested Extensions:  
X509v3 Basic Constraints:  
    CA:FALSE  
X509v3 Key Usage:  
    Digital Signature, Non Repudiation, Key Encipherment  
X509v3 Extended Key Usage:  
    TLS Web Server Authentication, TLS Web Client Authentication, Code Signing, E-mail  
Protection  
...
```

2.7. Create tenant client certificate bundle

1. Select **KMIP** in the menu bar in the KeyControl webGUI.
2. Select the **Tenants** tab.
3. Highlight the required tenant.
4. Select the link on **Tenant Login**. A new tab in the browser opens.

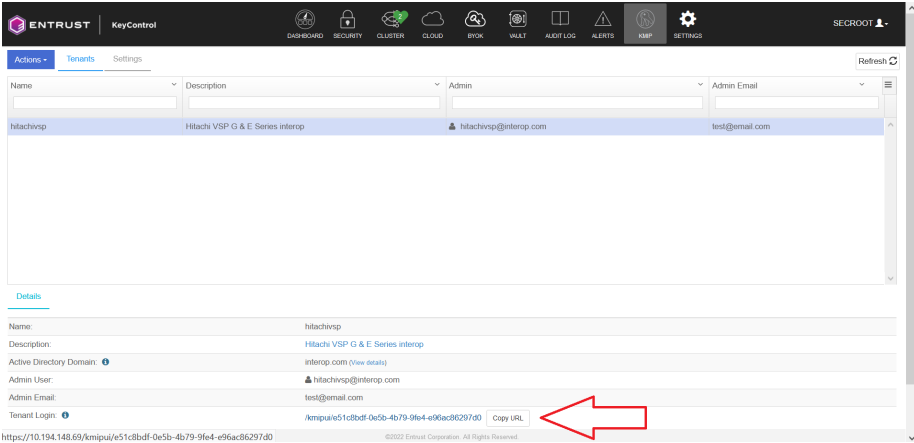

5. Log in with the tenant credentials.



KeyControl

KMIP Sign In

User Name

Password

SIGN IN

6. Select **Security > Client Securities**.
7. Select the **+** icon on right top corner to create new client certificate.
8. Specify the options and then select **Create**.

Create Client Certificate ✕

Certificate Name *

Certificate Expiration *

Certificate Signing Request (CSR)
 Browse

Encrypt Certificate Bundle

Certificate Password *

Confirm Password *

[Cancel](#) **Create**

9. Select the certificate bundle you created and select **Download**.

Certificate Details ✕

Name	hitachivsp
Expiration	May 19, 2023, 1:14:46 PM
Expires In (Days)	365
Certificate Generated From External CSR	✔ Yes

Download
Close

See the following link for additional information [KMIP Tenant Client Certificates](#).

2.8. Convert tenant client certificate to PKCS #12 format

1. Extract the `hitachivsp.pem` file from the tenant client certificate bundle zip file created in [Create tenant client certificate bundle](#). Save the `cacert.pem` file for use in [Import tenant client certificate into the VSP](#).

Name	Size	Packed Size	Modified	Attributes	Encrypted	CRC	Method	Host OS	Version	Volume I...
<input type="checkbox"/> cacert.pem	4 710	2 491	2022-05-19 17:14	0rw-----	-	D246423D	Deflate	Unix	20	0
<input type="checkbox"/> hitachivsp.pem	4 903	2 722	2022-05-19 17:14	0rw-----	-	E95AD1FE	Deflate	Unix	20	0

2. Convert to PKCS #12 format using OpenSSL:

```
# /usr/local/bin/openssl pkcs12 -export -out hitachivsp.p12 -in hitachivsp.pem -inkey svp.key -passin pass:hitachi -passout pass:hitachi
```

3. View the content of PKCS #12 formatted tenant client certificate bundle:

```
## /usr/local/bin/openssl pkcs12 -in hitachivsp.p12 -info -nodes
Enter Import Password:
MAC: sha256, Iteration 2048
MAC length: 32, salt length: 8
PKCS7 Encrypted data: PBES2, PBKDF2, AES-256-CBC, Iteration 2048, PRF hmacWithSHA256
Certificate bag
Bag Attributes
    localKeyID: 39 7C CD 50 10 5A D1 08 F4 1D 36 5D EC 2C 9F D4 03 DF 09 7F
subject=C = US, ST = Florida, L = Sunrise, O = Entrust, OU = Testing, CN = Interop, emailAddress = test@entrust.com
issuer=C = US, O = HyTrust Inc., CN = HyTrust KeyControl Certificate Authority
-----BEGIN CERTIFICATE-----
MIIEGzCCAwOgAwIBAgIERWwmATANBgkqhkiG9w0BAQsFADBXMQswCQYDVQQGEwJV
UzEVMBMGA1UEChMMShLUcnVzdCBJbmuMTewLwYDVQQDEyhIeVRydXN0IEtEUNv
bnRyb2wgQ2VydG1maWNhdGUgQXV0aG9yaXR5MjY0XDIyMDUxOTE3MTQ0N0l0XDIz
MDUxOTE3MTQ0N0l0wYgxCzAJBgNVBAYTA1VTMRAwDgYDVQQIDAAGbG9yaWRhMRw
DgYDVQQHDAdDw5yaXNlMRwDgYDVQQKDAFbnRydXN0MRwDgYDVQLDAAdUZXR0
aW5nMRwDgYDVQDDAdJbnRlcm9wMR8wHQYJKoZIhvcNAQkBFhB0ZXN0QGVudHJ1
c3QyY29tMIIIBjANBgkqhkiG9w0BAQEFAAOCAQ8AMIIBCgKCAQEA4LspigtffsEm
AQTYNlXe1vo8rG9AOPampKNJ6vZyazUmMJXLthh1LZC4YL0png2KPCRMMgzhlavP
Xd71ygtSF+Y2nK0y3zTfxVn/G0XpsfiPqIKrvBfkLoB0J1RBPsX0b7DTHqTafZ4E
9I+FLP1XfqI/UGyaNU0grfVchszZbnT07N3W8Ib1KszSdCma8Z7B05xeH0qG9E+9
qembYLhMhMYJi8Ce+d5Jy+N5FKGWnyNHL2Az+WAlcTLPpEE5LSPk4DHgrj2jBow
```

```

KUdoHiRKYTN50S7nqG6YztSkdsrLZ04IYrmv+5ajkveqbCU5Ryv0tLSVpzOnkLm+
8TrxBueGpQIDAQABo4G8MIg5MAkGA1UdEwQCAAwLAYJYIzIAyb4QgENBB8WHU9w
ZW5TU0wgR2VuZUJhdGVkIENlcnRpZmljYXRlMB0GA1UdDgQWBRTu08eezyJhW6A
d0t8tJxR+JFfTjAfBgNVHSMEGDAWgBTZyL94G7MoJrArAs23seS670EqwTALBgNV
HQ8EBAMCBeAwMQYDVR0LBCowKAYIKwYBBQUHAWEGCCsGAQUFBwMCCBggrBgEFBQcD
AwYIKwYBBQUHAWQwDQYJKoZIhvcNAQELBQADggEBAM1gRZK6jWTQARyEoqDyhPkW
6evjZmIprWzohSeN+iDHGp8yU8SwM5YaFyihKTcPIy5xNtz1R30701S1LhdqVX0Fq0
ioSOKuS75mvIS/cQ90wFST0ge3qnC7kEqj8XtXrNTJM7FoOWgFKok/8IbTnbKnNL
wr6KJr0TMFoYuf20UYC3RByvdzJ3xs2VMViTuXgviUw1ZVV/0JpNL1Tdmxh9Ii2h
qhIQujcu3MQ/teaWn+K4FDMqL5xVFCsYAF0fy62Z8M9jFsKfNJTHQ99uqYNTxGp
bruaJADX74yNn3F0pjFjJmP869gtfN3tBp1evYCBQTOQMObEL3dUn2FU990DQY=
-----END CERTIFICATE-----
PKCS7 Data
Shrouded Keybag: PBES2, PBKDF2, AES-256-CBC, Iteration 2048, PRF hmacWithSHA256
Bag Attributes
    localKeyID: 39 7C CD 50 10 5A D1 08 F4 1D 36 5D EC 2C 9F D4 03 DF 09 7F
Key Attributes: <No Attributes>
-----BEGIN PRIVATE KEY-----
MIIEvQIBADANBgkqhkiG9w0BAQEFAASCBCkwwgSjAgEAAoIBAQDiWmKc19+wSYB
Bng2Vd6W+jysb0A48Cako0nq9nJrNSYwLcu2GHUtkLhgvSmeDyo8JEwyD0GvP9d
3vXKC2wX5jaco7LfnN/Fwf8bRemx+i+ogqu8F+QugE4nVEE+xc5vsNMepNp9ngT0
j4Us+Vd+qL9QbJo1Q6Ct9VyGzNLudPTs3dbwhuUqzNJ0IxrXnsE7nf4c6ob0T72p
6ZtgseaExgmLwJ753knL43kUoZafI0eXYDP5YCVxMs+mcQTktI+TgMcauPaMgjAp
R2geJEphM3nRLueobpj01KR2ystnTghuia/7lq0S96psJTLHK860tJWnM6eQub7x
0vEG54a1AgMBAECggEAaGlgGjA6fSr2CrXANXa0KxQfjQPVGyzstTo0aW3zwcSh
jJpYEobe6v91d+9kVOYrNkKamORF1+wfwMvsj5uK4s6g2sXHRJYup+Vj9yDbr95P
6ccxCZH/Ac7bu91oKvmxZ0Knydb+h7Wq1VmmceIfDmMLryIWT3/7hp3DaMrpbr0U
+t0bN0DNSiU0+0hWxFF63muW5WebEtrEAmrROgd+5TLhustVujiggKTeB8W6GSLz
kaLzPVjkfiOU6RDTzJexSK+It7uciaAPbvCwtoCcaGqKw+qw899tZnw1S1x46mxB
FBuqiUPjLXDctfPftsUU4zyZMd6/l/nke1NuroqIQKbgQDyHTHEEQ8wNFMBIBJW
+sIiBHEbJNZA81W0W50+A5DR/9LRKKBKsQ5G53gP6cK9zfyOMCZctZtIwxHipMhP8
YOAH+X8pPLAFJF6ic4B+A9DxbFCZLP3/Tr8Gv3Mh5Tmt0JXk1IYfBDSArr5HQf5
pdC9V18zccq9HLFWq9b0IixnFPQKBgQDvVpQ79JWGXjmrq5ZNYIe5mf9U4koFugw6
UwvhCGKx0TSo1haWLVS61pONVu21Di8te9uI08rLwsBgId097xya6SwEE7ekX6fC
Arj+AQEsCay6TdSfILDeoM0YkSYnLokaoJ/9kzz4PIHTLN4uSe0LDi0KkrEVxy0t
pRHY18ptiQKBgBY+Uv4F5zRRiLUSpDyzewRvDgkLYD3FVXf2fn6D+MLM2b+XIDR
EGFYIVtv4N6mjph+BRKZwLPrb+pzfFySdeKlRgYyej9usPcRgViS9qwOTJpB9rRQ
3AtvW2PgDPEJUX5EPaWcOFti/tSGM0ZfUocibqmWXR4WN6SmQQC47twAogBALbB
0s6pWsa1/wv6KXRnqm3sDI9J19JvPv6n6Us1Nv8yumYty+Nyy7eGg/cKkM3AMLP
aWxKpPEAhtZ4HGZcxNK90RJthG6xQ0dRpsWM0noPU+pfLDhgozk5pdaxnJ1Lb2y
Z1iepJC8yzm/1AQuiPmhoH0RVE1X2Y0Pp1fnWDhZAoGABV/Ne1oaXJT2gEgAqXCm
QLco/VfKaFFyIv/pViEPcW3W4p05+AaVmSff8gid4VJ6YNIH2cbszaMwUnRKnZhY
89uLN01aVMEbjN0GJKqZUb18Ya0yI8pg1wzDrVhpoV9CNWQPq/J9WyTvYyfmfLLr
e2DXuNht5BmG7ouca7XEnU0=
-----END PRIVATE KEY-----

```

2.9. Import tenant client certificate into the VSP

1. Import the **hitachivsp.p12** and **cacert.pem** certificates into the VSP as required.
2. You can now use standard API calls to interact with KeyControl.

2.10. Configuration to support the Hitachi VSP

A change to KeyControl configuration file is required to support the Hitachi VSP. Contact Entrust customer support so they can perform this change remotely.

Once the KeyControl server instance is configured for the Hitachi VSP, it may not

work with other KMIP client integrations. A separate KeyControl instance may be required to support other clients.

2.11. Execute tests

Execute the test as described in Hitachi's internal documentation.

Chapter 3. Integrating with an HSM

For guidance on integrating the Entrust KeyControl with a Hardware Security Module (HSM), consult with your HSM vendor. If you are using an Entrust nShield HSM, refer to the [Entrust KeyControl nShield HSM Integration Guide](#) available at [Entrust documentation library](#).

Chapter 4. Additional resources and related products

4.1. [KeyControl](#)

4.2. [Entrust digital security solutions](#)

4.3. [nShield product documentation](#)